
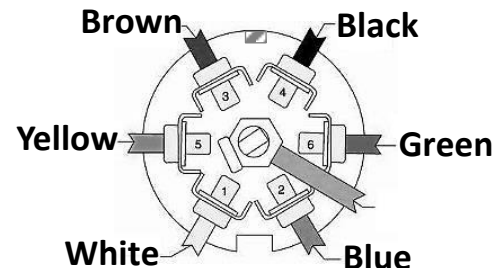
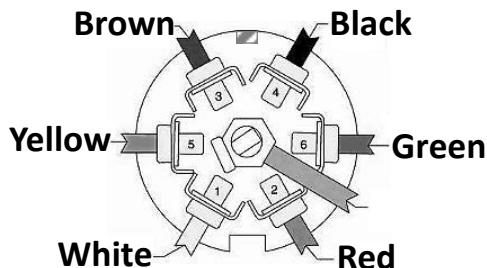


Standard DOT Wiring




Sealed Wiring Harness

C34/Wedge w/ Sealed Wiring Harness


No Charge Wire

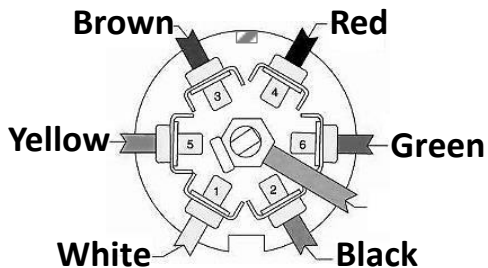

With Charge Wire (winch, hydraulics)

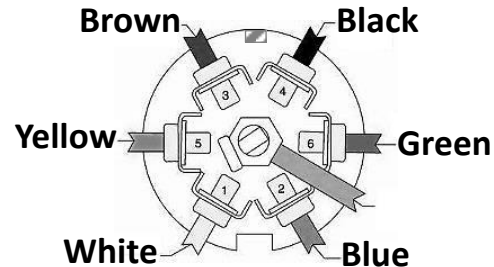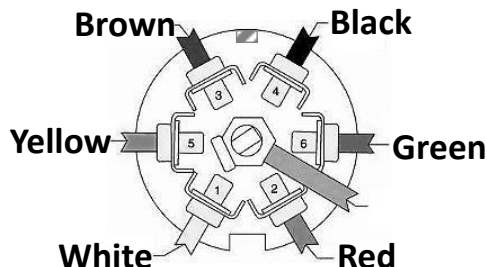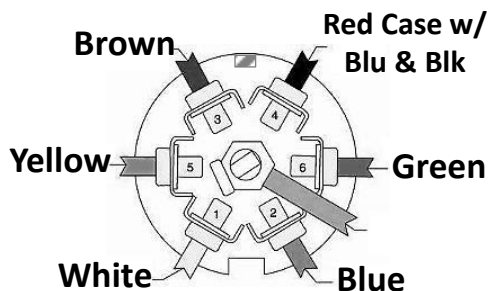

- Ensure any power sources are disconnected
- Loosen Face Setscrew and Cable Clamp
- Slide Plug Body back onto Trailer Wiring, exposing terminals on back of Plug Face
- Wiring schematics above are looking at the REAR of the plug face, with the Setscrew at the 12 o'clock position
- Secure wiring in terminal clamps, ensuring that wires do NOT touch multiple terminals
- Note that the CENTER post is NOT used

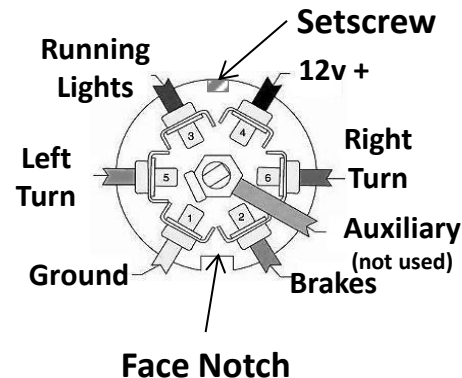

7 Way RV (blade) plug Trailer Side